

How to install driver

1: Turn off the printer. Plug the power cable into the power socket on the wall, and then connect the other end of the cable to printer's power socket. Connect the Parallel to USB cable to the port on the printer and on the PC.

2. Turn on the printer.

3. Run the seagull driver. On the prompt, Windows Printer Driver, select "I accept..." and click "Next".



4. Assign the directory to keep Seagull driver, (for example: C:\Seagull) and click "Next".




5. Click "Finish".




6. Select Install printer drivers and Click "Next"




7. Make sure printer is connected to PC, select "Other" and click "Next":

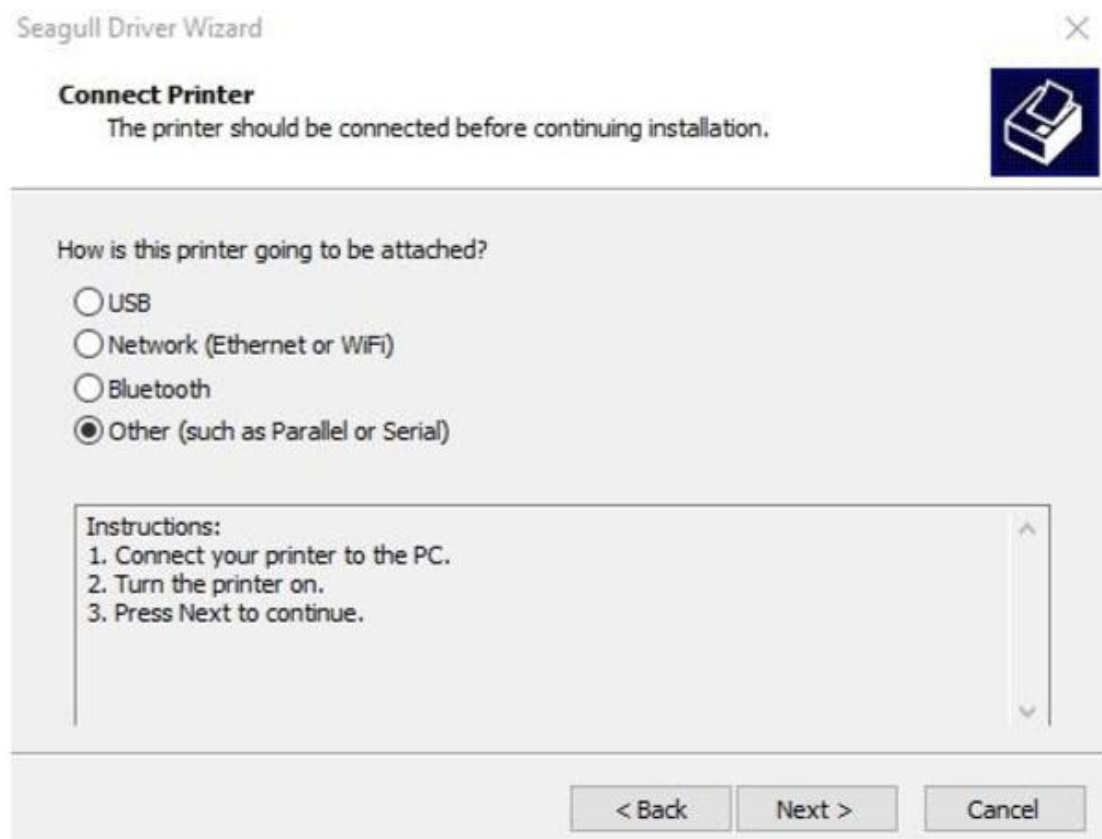

8. Select model & emulation

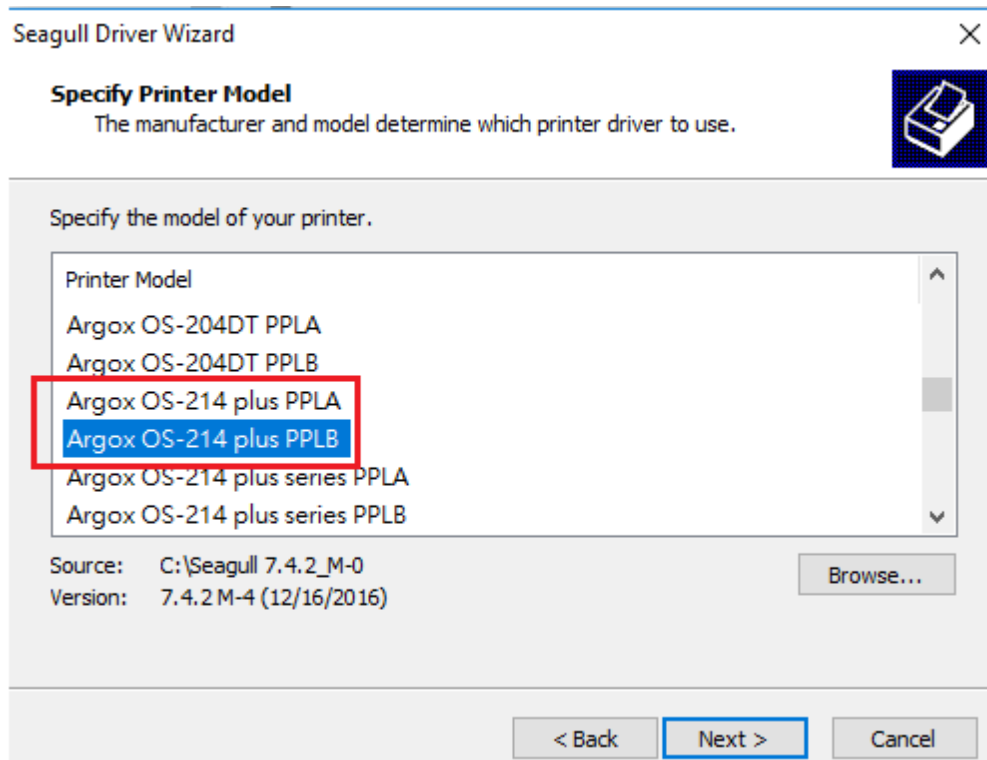

9. Assign a USB port to the printer and click "Next".

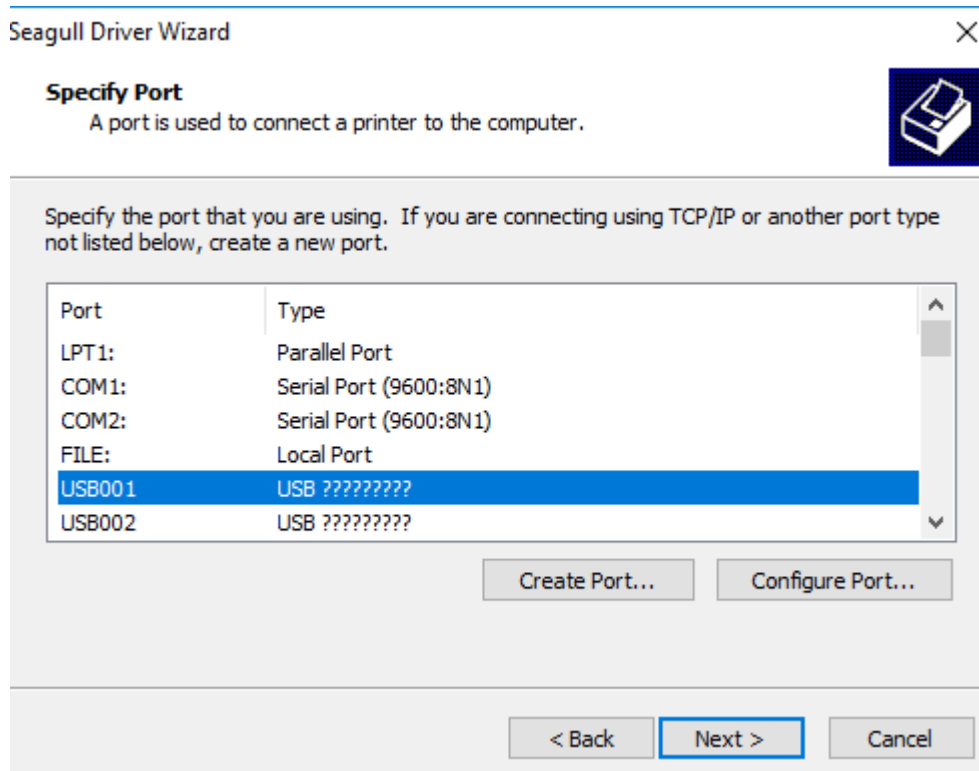

10. Select "do not share this printer" and click "Next".

Seagull Driver Wizard

Specify Printer Name

Names are used to identify the printer on this computer and on the network.

Enter a name for this printer.

Printer name:

Use this printer as the default printer

Specify whether or not you want to share this printer with other network users. When sharing, you must provide a share name.

Do not share this printer

Share name:

< Back Next > Cancel

11. Check all the data on the showing screen, if it is correct, click "Finish".

Seagull Driver Wizard

Completing the Seagull Driver Wizard

A new printer will be installed using the following settings:

Name:	Argox OS-214 plus PPLB
Share name:	<Not Shared>
Port:	USB001
Default:	Yes
Manufacturer:	Arqox
Model:	Argox OS-214 plus PPLB
Version:	7.4.2 M-4 (12/16/2016)

To begin the driver installation process, click Finish.

< Back Finish Cancel