

AS-8050 設定開啟/關閉掃描音效

How to Enable/ Disable good read buzzer on AS-8050.

1. 請先至 **Argox** 官網下載使用手冊。

Please download User's Manual from Argox official website as below.

<http://www.argo.com/zh-hant/product/as-8050/>

The screenshot shows the Argox website's product page for the AS-8050. The top navigation bar includes 'PRODUCTS', 'SOLUTIONS', 'DOWNLOAD', 'SUPPORT & SERVICES', 'NEWS', 'PARTNER AREA', and a search icon. The breadcrumb trail reads 'PRODUCTS > BARCODE SCANNERS > 1D STANDARD RANGE IMAGERS > AS-8050'. On the left, there is a 'SEARCH PRODUCTS' section with a search bar and a 'PRODUCT CATEGORIES' list. The main content area features a large image of the AS-8050 scanner, a 'Model List: AS-8050' section, and a 'Compare' button. Below the scanner image, there are smaller images of the scanner and its accessories. The 'USER MANUAL' link in the navigation menu is highlighted with a red box. Below the navigation menu, the 'USER MANUAL' section is also highlighted with a red box, showing the text 'AS-8050 user manual EN' and a 'DOWNLOAD FILE' button.

SEARCH PRODUCTS

Search... Q

PRODUCT CATEGORIES

Barcode Printers ▾

Barcode Scanners ▴

- 1D Cordless Imagers
- 1D Standard Range Imagers**
- 1D Long Range Imagers
- 1D Contact/Short Range Imagers
- 2D Barcode Imagers
- 2D Cordless Barcode Imagers
- 2D Presentation Scanners

Mobile Computers ▾

Discontinued Products ▾

PRODUCT TAGS

AS-8050

Model List: AS-8050

- Fast 1D barcode reading.
- Up to 3mil reading capacity.
- Easy to read screen barcodes.

Compare

Category: 1D Standard Range Imagers

INFORMATION GENERAL SPECIFICATIONS BROCHURE **USER MANUAL** DRIVERS

USER MANUAL

AS-8050 user manual EN

DOWNLOAD FILE

2. 請依下列步驟，掃描使用手冊 P.21 的條碼設定。











Please follow the instruction as below in User's Manual on P.21.

4.3 Buzzer & LED control

Data format:

Length	Message Source	Message target	Reserve	Opcode	Command	beeper	Check Sum
0x0B	0x04	0x31	0x00	0x50			

Command:

1.	%SET	
	Disable boot buzzer	B0000 
	*Enable boot buzzer	B0001 
2.	Disable good read buzzer 關閉	B0100 
	*Enable good read buzzer 開啟	B0101 
	Buzzer volume: low	B0200 
	*Buzzer volume: Medium	B0201 
	Buzzer volume: high	B0202 
	Disable barcode set buzzer	B0300 
	*Enable barcode set buzzer	B0301 
3.	%END	